

# Dry Bay, SE09-04

Center of map at 59° 07.33' N Lat., 138° 37.30' W Lon.



EX01b viewed from the south.



EX01e viewed from the south.




The western beach of the entrance to Dry Bay viewed from the north.

Map Legend

-  Free-oil Recovery
-  Exclusion Booming
-  Protected-water Boom
-  Bears in Area, Guards Recommended

## Geographic Response Strategies for Southeast Alaska Subarea, Zone 9

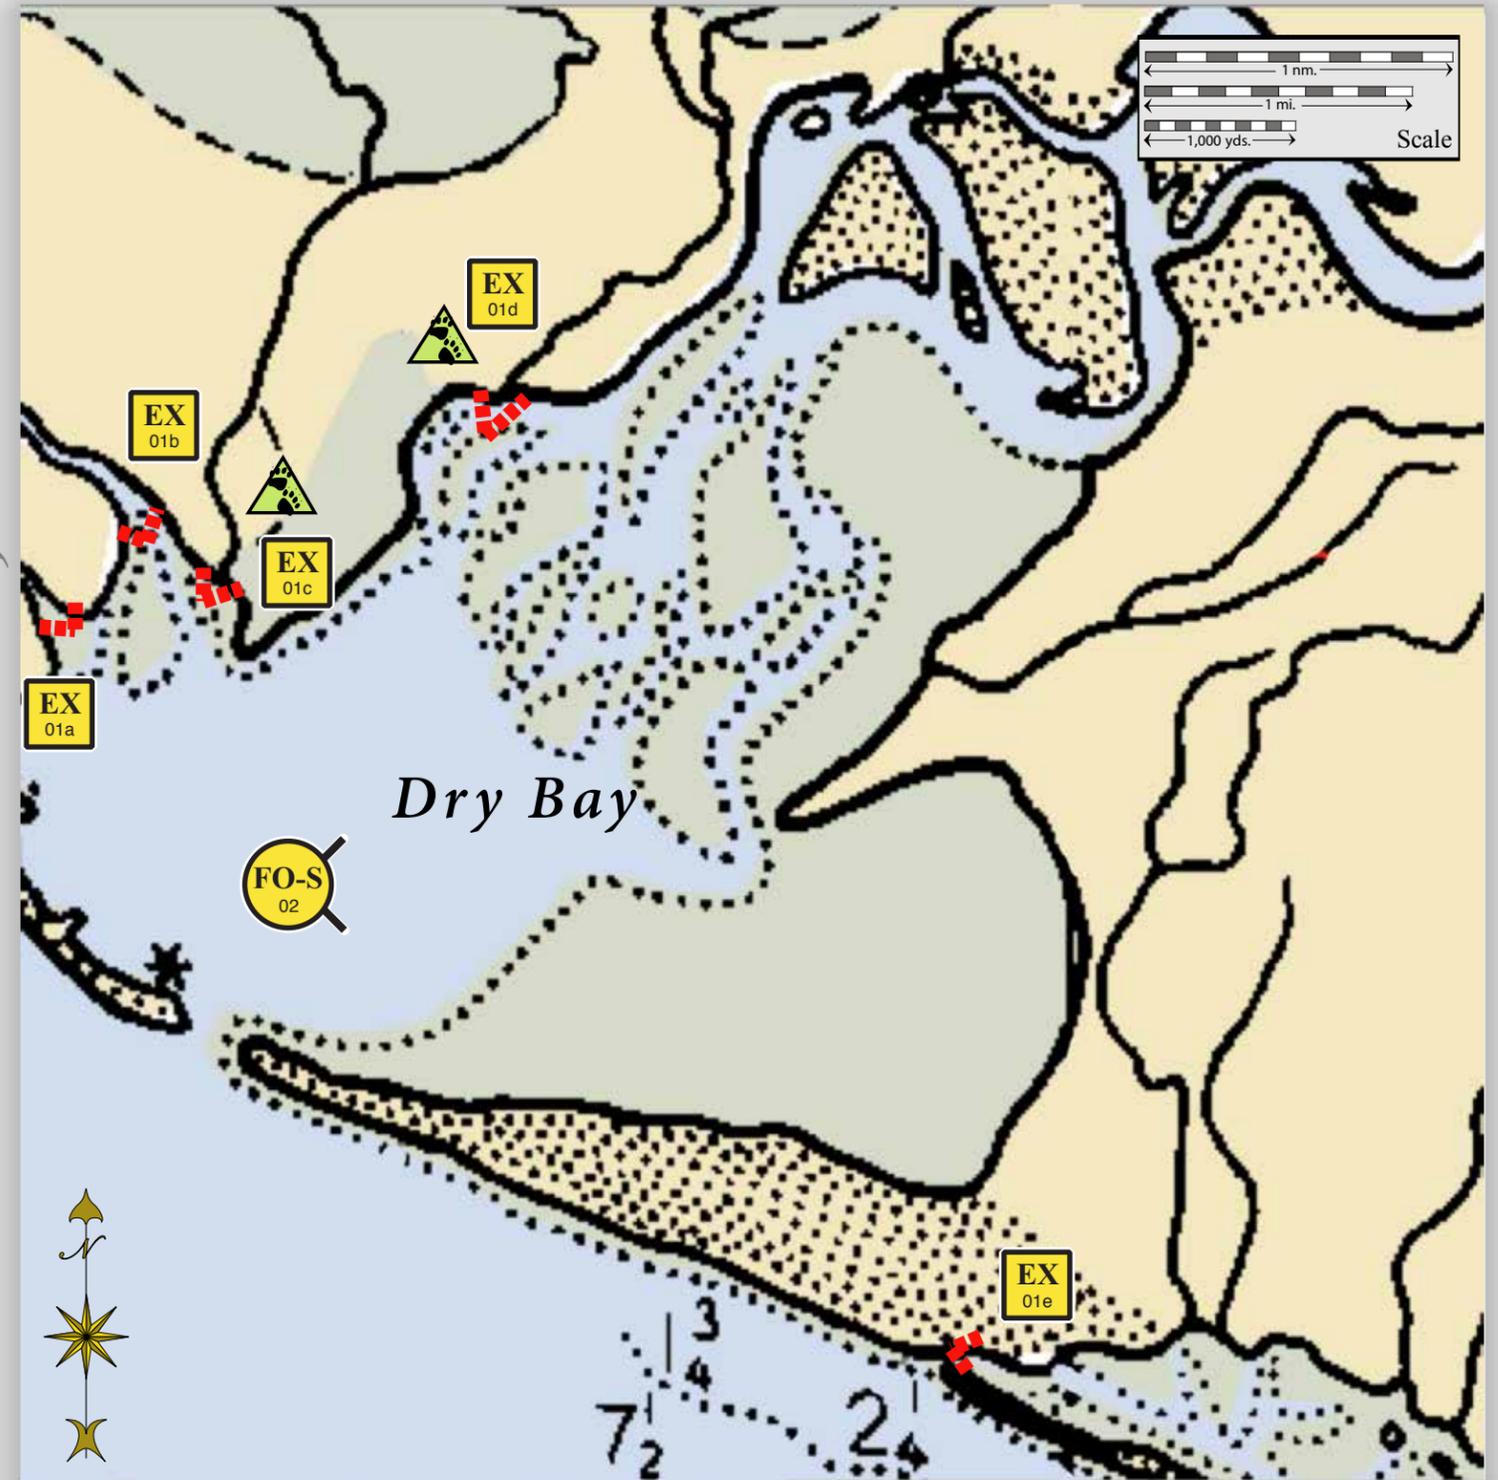

This is not intended for navigational use.

ID	Location and Description	Response Strategy	Implementation	Response Resources	Staging Area	Site Access	Resources Protected	Special Considerations
SE09-04-01 	<p><b>Dry Bay</b></p> <p>a. Lat. 59° 09.45'N Lon. 138°37.47'W</p> <p>b. Lat. 59° 09.47'N Lon. 138°37.39'W</p> <p>c. Lat. 59° 09.35'N Lon. 138°37.12'W</p> <p>d. Lat. 59° 11.36'N Lon. 138°33.14'W</p> <p><b>East Alsek River</b></p> <p>e. Lat. 59° 06.31'N Lon. 138°31.45'W</p>	<p><b>Exclusion</b></p> <p>Exclude oil from entering the Dry Bay creeks.</p>	<p>Deploy anchors and boom with skiffs (class 6).</p> <p>Place specified amount of protected-water boom in a chevron pattern in front of the entrances to designated creeks.</p> <p>Tend throughout the tide.</p> <p><u>Boom Lengths:</u></p> <p>a. 300 ft.</p> <p>b. 600 ft.</p> <p>c. 200 ft.</p> <p>d. 300 ft.</p> <p>e. 600 ft.</p>	<p><b>Deployment</b></p> <p><b>Equipment</b></p> <p>2000 ft. protected-water boom 25 ea. anchor systems 10 ea. anchor stakes</p> <p><b>Vessels</b></p> <p>1 ea. class 3 3 ea. class 6</p> <p><b>Personnel/Shift</b></p> <p>9 ea. vessel crew</p> <p><b>Tending</b></p> <p><b>Vessels</b></p> <p>1 ea. class 6 1 ea. class 3</p> <p><b>Personnel/Shift</b></p> <p>5 ea. vessel crew</p>	Vessel Platform	<p>Via marine waters</p> <p>Chart 16016</p>	Same as SE09-04-02	<p>Vessel master should have local knowledge.</p> <p>Area lodges may provide support.</p> <p>Bears are present in the area. Bear guards are required.</p> <p>Consult with Incident Command to ensure ADFG-Title 16 and ADNR-Title 41 permits have been obtained.</p> <p>Consult the Site Selection Matrix for cultural resources designation.</p> <p>Consult the ADEC "Spill Tactics for Alaska Responders" manual for additional information on the deployment of these tactics.</p> <p>Survey: not yet</p> <p>Tested: not yet</p>
SE09-04-02 	<p><b>Dry Bay</b></p> <p>Nearshore waters in the general area of:</p> <p>Lat. 59° 08.15'N Lon. 138°36.20'W</p>	<p><b>Free-oil Recovery</b></p> <p>Maximize free-oil recovery in the offshore &amp; nearshore environment of Dry Bay depending on spill location and trajectory.</p>	<p>Deploy free-oil recovery strike teams upwind and up current of Dry Bay.</p> <p>Use aerial surveillance to locate incoming slicks.</p>	<p>Deploy multiple free-oil recovery strike teams as required to maximize interception of oil before it impacts sensitive areas.</p>	Yakutat- 50nm-via marine access	<p>Via marine waters</p> <p>Chart 16016</p>	<p>Fish: chum, coho, chinook, pink, sockeye, dolly varden, steelhead</p> <p>Birds: shorebird concentration, waterfowl concentration</p> <p>Habitat: sheltered tidal flats, sandy beach</p> <p>Human Uses: high recreational use, subsistence fish</p>	<p>Vessel master should have local knowledge.</p> <p>Use extreme caution, shoal waters with numerous reefs and rocks, shallow mud flats and channels.</p>

NOTE: Sensitive resource information can be found on other maps which can be accessed through the sensitive area section of the SE AK Sub-Area Contingency Plan: [http://www.dec.state.ak.us/spar/perp/plans/scp\\_se.htm](http://www.dec.state.ak.us/spar/perp/plans/scp_se.htm).